

## Chapter 1 : SOLVED: Instruction manual for Bosch Exxcel Express - Fixya

*View and Download Bosch Exxcel Express instruction manual and installation instructions online. Exxcel Express Washer pdf manual download. Also for: Maxx exxel , Exxcel , Exxcel express, Exxcel , Exxcel*

Installation Instructions - our customer service will be happy to advise you. Further information and a selection of our products can be found on our Internet page: Disposal Information Disposal Information The shipping package has protected your new Disposing of the appliance on its way to your home. All packaging packaging materials are environment friendly and recyclable. Please contribute to a better environment by disposing of packaging materials in an environmentally conscious manner. See Page 37 for consumption values of your appliance. Hints and tips Using your washing machine in an efficient and envi ronmentally friendly manner: Detergent for prewash or starch. Detergent for main wash, water softener, pre soaking agent, bleach and stain removal product. Control Panel Control panel Buttons for additional options The "Ready in" time is displayed in addition to the programme if required if the programme is selected, "Reduced Ironing": The "Start in" time is displayed "Rinse Plus": Your appliance was tested before leaving the factory. To remove any water left over from testing proce dures, the first washing cycle should be carried out without laundry in the machine. Never wash new multi coloured items together with other items. According to colour and degree of dirt White items may become grey. Always wash white and coloured items separately. Slight dirt Degrees of dirt No recognizable dirt or staining. Page 13 Sorting laundry Only wash laundry that is labelled with the following according to their care care symbols: Page 14 d Risk of explosion! Loading the laundry Items of clothing that have been pretreated with solvent based cleaning agents, e. Therefore, these items must first be rinsed thoroughly by hand. Caution Loose debris in the washing machine drum can damage the laundry. Dispensing the Keep detergents and additives out of the reach correct amount of children. This information can be obtained from your local water authority. Dispenser II Detergent for main wash, water softener, pre soaking agent, bleach and stain removal product. Dispenser 2 Additives, e. Programmes And Functions Programmes and functions Select the desired programme - see also the separate programme overview. For maximum spin speeds of the programmes see Page Delicates cycle at 30 C for machine washable silk. We do not recommend washing these textiles with other rougher textiles. After the spin cycle the washing is arranged loosely in the drum - creasing is reduced. Note maximum load for each type of textile; remove the laundry as soon as the spin cycle is complete. The expected "Ready in" time programme dura tion is displayed, e. Page 22 "Start in" display and button Before starting a programme, you can specify by how many hours the "Start in" time should be delayed. The "Ready" indicator light is on. The expected "Ready in" time will be displayed. Washing Washing q Turn on water tap. The "Ready in" time is displayed. Page 24 q If required, select the "Start in" time. The "Start in" time begins running immediately. The programme starts automatically after the "Start in" time has elapsed. If you have accidentally selected the wrong pro Changing gramme: Special Applications Special Applications q Load laundry of the same colour. The "Ready" indicator light is on q Press the "Start" button. Page 27 As soon as water starts to enter the machine: If "Rinse Hold" is selected, the "Drain" programme must be subsequently selected. Only use dyes that are environmentally compatible Dyeing and suitable for use in washing machines. Always disconnect the appliance from the mains before cleaning. Never clean the washing machine with a jet of water. Never use solvents to clean the appliance. Cleaning the q Use hot soapy water or a mild, non abrasive appliance housing Page 29 In the event that residual detergents or additives have Cleaning the deter accumulated: Cleaning The Drain Pump This is necessary if the washing solution has not been Cleaning the drain completely drained. The pump is blocked by either pump loose debris or fluff which accumulates if fluff giving fabrics are washed. Have a suitable container re Draining the washing solution ady. Cleaning Water Inlet Strainers q Push up the closing cap 1st and place the drain hose back in its holder 2nd. A little residual water will flow out. Descaling The Washing Machine Cleaning the strainer at the water tap q Disconnect the hose from the water tap. Cleaning the strainer on the washing machine q Disconnect the hose from the back of the washing machine. Repairs must only be carried out by our Customer Service or an authorized technician. If repairs are needed, and assuming that you cannot eliminate

the fault yourself with the aid the following table: The "Wash" indicator Close the loading door a click light flashes should be heard. Programme does not "Start" button not pressed. Page 35 Fault Cause Action Spin result unsatisfactory. This is not a fault. The imbalance compensation system is attempting to balance the load through repeated spins. Page 36 Fault Cause Action In the case of excessive foam, the Reduce the amount of detergent Increase in "Ready in" foam detection system has activated next time. For severe imbalances during Wash large and small items spinning, an increase in time of Customer Service Customer service Before calling the Customer Service, please make sure that you cannot eliminate the fault yourself refer to Page This is because consultation provided by our technicians, even within the warranty period, will lead to costs being incurred by yourself. Your nearest Customer Service centre can be found in the index supplied. Safety instructions The washing machine is very heavy. Take care when lifting it. Do not install the washing machine outdoors or in an area prone to frost. Page 40 Supplied Inside the drum: Any dampness inside the drum is left over from final testing which every washing machine is subjected to before leaving the factory. On the rear of the appliance:

## Chapter 2 : BOSch exxcel express | DIYnot Forums

*View and Download Bosch Exxcel 7 express instructions for use manual online. Exxcel 7 express Washer pdf manual download. Also for: Waeuk.*

Installation Instructions - our customer service will be happy to advise you. Further information and a selection of our products can be found on our Internet page: Disposal Information Disposal Information The shipping package has protected your new Disposing of the appliance on its way to your home. All packaging packaging materials are environment friendly and recyclable. Please contribute to a better environment by disposing of packaging materials in an environmentally conscious manner. Safety Information Safety Information q Your washing machine is intended: See Page 35 for consumption values of your appliance. Using your washing machine in an efficient and environmentally friendly manner: Detergent for prewash or starch. Detergent for main wash, soaking agent, softener, bleach or stain remover. Control Panel Control panel 1. Can be rotated in either direction. Control lights illuminate The programme selector does not rotate End when programme is finished. Your appliance was tested before leaving the factory. To remove any water left over from testing procedures, the first washing cycle should be carried out without laundry in the machine. Sorting The Laundry Sorting the laundry Caution according to colour Items of clothing can become discoloured. Never wash new multi coloured items together with other items. White items may become grey. Always wash white and coloured items separately. Specifications Only wash laundry that is labelled with the following according to their care symbols: Loading The Laundry Loading the laundry d Risk of explosion! Items of clothing that have been pretreated with sol vent based cleaning agents, e. Therefore, these items must first be rinsed thoroughly by hand. Caution Loose debris in the washing machine drum can damage the laundry. Dispensing the Keep detergents and additives out of the reach correct amount of children. This information can be obtained from your local water authority. Filling laundry Detergent for prewash or starch. Programmes And Functions Programmes and Functions Select the desired programme - see also the separate Basic programmes programme overview. To protect the drainage pipes, the hot water is mixed with approx. Page 18 30 C Delicates For delicate, washable textiles, e. Delicates cycle at 30 C for hand and machine washable silk. We do not recommend washing these textiles with other rougher textiles. To treat very delicate silk textiles even more gently, reduce the time by pressing the I Reduced Time button. Up to a maximum of 3 kg. Water and energy consumption is therefore reduced when washing small amounts of laundry. Unbalanced load detection system The automatic unbalanced load detection system spins the washing several times to ensure even distri bution. Washing Washing Turn on the water tap. The Ready control light comes on. Where required, press the option button s for additional function s. Press the M Start button. The Active control light comes on, and the pro gramme starts. Page 22 If you have accidentally selected the wrong Changing programme: Turn the programme selector to the desired pro gramme. The Active control light comes on, and the new programme starts. Turn the programme selector to Off, and, where required: At the end of the programme option, turn the pro gramme selector to Off. Special Applications Special Applications Load laundry of the same colour. Page 25 As soon as water starts to enter the machine: Pull out the detergent dispenser slightly. Add the starching solution to chamber I. Close the detergent dispenser. Always disconnect the appliance from the mains before cleaning. Never clean the washing machine with a jet of water. Never use solvents to clean the appliance. Cleaning the q Use hot soapy water or a mild, non abrasive appliance housing Descaling The Washing Machine In the event that residual detergents or additives have Cleaning the deter accumulated: Pull up the insert. Rinse the detergent dispenser under hot running water. Cleaning The Drain Pump This is necessary if the washing solution cannot be Cleaning the drain completely drained. The pump is blocked by either pump loose debris or fluff which accumulates if fluff giving fabrics are washed. Have a suitable container ready. Page 29 To avoid unused detergent from flowing into the drain during the next wash cycle: Select the b Drain programme. This is necessary if very little or no water flows into the Cleaning water inlet washing machine. Page 30 Cleaning the strainer on the washing machine Disconnect the hose from the back of the washing machine. Pull out the strainer and rinse under running water. Insert the strainer and

## DOWNLOAD PDF BOSCH EXXCEL 1200 EXPRESS MANUAL

reconnect the hose. Turn on the water tap and check whether water is still discharged. Repairs must only be carried out by our Customer Service or an authorized technician. If repairs are needed, and assuming that you cannot eliminate the fault yourself with the aid the following table: Turn the programme selector to Off. The Ready control light Close the loading door a click flashes. Programme does not M Start button not pressed. Page 33 Fault Cause Action Spin result unsatisfactory. L Rinse or B Spin programme selected - maximum spin speed r. Repeated spinning at This is not a fault. The imbalance compensation system is attempting to balance the load through repeated spins. This is not a fault. Customer Service Customer Service Before calling the Customer Service, please make sure that you cannot eliminate the fault yourself refer to Page This is because consultation provided by our technicians, even within the warranty period, will lead to costs being incurred by yourself. Your nearest Customer Service centre can be found in the index supplied.

### Chapter 3 : Bosch exxcel express manual pdf free download

*SOURCE: bosch exxcel express washing I had F63 on Bosch washing machine (Maxx 7). I waited 5 days for a repairman and all he did was reset the washing machine processor, like this: 1.*

### Chapter 4 : SOLVED: User manual for Bosch exxcel 7 express - Fixya

*Bosch Exxcel express and also MAXX freedom performance is this enough info for you to send me the service manual? I won't be attempting the repair myself (I'd probably electrocute myself) but will have to wait for my Son to visit.*

### Chapter 5 : bosch exxcel dishwasher ebooks preview

*Bosch Exxcel 7 Express washing machine 2 years old, the water is not being pumped out of the machine, i have checked the pump cover and it is clean, i have emptied all the water out via this exit .*

### Chapter 6 : BOSCH CLASSIXX INSTRUCTION MANUAL Pdf Download.

*Washer Bosch BOSCH Washer Installation Instructions Manual Bosch washer operating, care and installation instructions ( pages) Washer Bosch Exxcel Express Instruction Manual And Installation Instructions.*

### Chapter 7 : BOSCH EXXCEL EXPRESS INSTRUCTION MANUAL AND INSTALLATION INSTRUCTIONS

*Bosch exxcel express spinning slowly I would suggest that you remove the motor, and check the brushes for wear. If they are less than 3 or 4mm long, then they need to be replaced.*

### Chapter 8 : Bosch Exxcel Express WFGB - Fixya

*I have a Bosch Exxcel 7 Express (WAEGB) washing machine just over 2years old.I put it on to wash and it counts the time down but does not move through the cycle ie stays on wash, not moving .*

### Chapter 9 : BOSCH EXXCEL 7 EXPRESS INSTRUCTIONS FOR USE MANUAL Pdf Download.

*bosch appliances exxcel express manual more than one name. Some call it an BOSCH EXXCEL EXPRESS WASHING Thu, 01 Nov GMT Bosch.*