

Manuals or user guides for your HP Color LaserJet CM Multifunction Printer For HP products a product number.

Various buttons appear in this area, depending on the current status. For a description of each button that can appear in the status line, see Buttons on the touchscreen. After you sign out, the device restores all options to the default settings. The system administrator can select the format that the device uses to show the date and time, for example hour format or hour format. Buttons on the touchscreen The status line on the touchscreen provides information about the status of the device. Various buttons can appear in this area. The following table describes each button. On the touchscreen, press the Home button to return to the Home screen from any other screen. On the touchscreen, press the Start button to begin the action for the feature that you want to use. The name of this button changes for each feature. For example, in the Copy feature, the button is named Start Copy. If the device is processing a print or fax job, the Stop button appears instead of the Start button. On the touchscreen, press the Stop button to halt the current job. The device prompts you to cancel the job or to resume it. The error button appears whenever the device has an error that requires attention before it can continue. Touch the error button to see a message that describes the error. The message also has instructions for solving the problem. The warning button appears when the device has a problem but can continue functioning. On the touchscreen, press the warning button to view a message that describes the problem. On the touchscreen, press the help button to open the built-in online Help system. For more information, see Control panel help-system. The device has a built-in Help system that explains how to use each screen. On the touchscreen, press the Help button in the upper-right corner of the screen to open the Help system. For some screens, the Help opens to a global menu where you can search for specific topics. You can browse through the menu structure by touching the buttons in the menu. For screens that contain settings for individual jobs, the Help opens to a topic that explains the options for that screen. If the device alerts you of an error or warning, touch the error or warning button to open a message that describes the problem. The message also contains instructions to help solve the problem. Menus overview From the Home screen, press Administration to open the menu structure. You might need to scroll to the bottom of the Home screen to see this feature. The Administration menu has several sub-menus, which are listed on the left side of the screen. Press the name of a menu to expand the structure. Continue opening the structure until you reach the option that you want to configure. To return to the previous level, press Back. To exit the Administration menu, press the Home button in the upper-left corner of the screen. The device has built-in Help that explains each of the features that are available through the menus. Help is available for many menus on the right-hand side of the touchscreen. Or, to open the global Help system, press the Help button in the upper-right corner of the screen. The tables in the following sections appear in order of the structure of each submenu under the Administration menu: From the Home screen, press Administration to open the menu structure and access the sub-menus. Touch the name of a menu to expand the structure. Continue opening the structure until you locate the option that you want to configure. Or, to open the global Help system, touch the Help button in the upper-right corner of the screen. The tables in the sections that follow indicate the overall structure of each menu under the Administration menu. Use this menu to print information pages and reports that are stored internally on the device.

Chapter 2 : HP Color LaserJet CM MFP Driver Download, Software, and Setup

View and Download HP Color LaserJet CM/CM - Multifunction Printer service manual online. HP Color LaserJet CM/CM MFP Series - Service Manual. Color LaserJet CM/CM - Multifunction Printer All in One Printer pdf manual download.

Select your country from the list; then touch Save. On the Date and Time screen: Select the desired Date Format. Touch the day field under the Date heading and use the pop-up keypad to enter the current date; then touch OK. Touch the month field under the Date heading and select the current month from the list; then touch OK. Touch the year field under the Date heading and use the pop-up keypad to enter the current year; then touch OK. Select the desired Time Format. Touch the hour field under the Time heading and use the pop-up keypad to enter the current hour; then touch OK. Touch the minute field under the Time heading and use the pop-up keypad to enter the current minute; then touch OK. Touch Fax Header Information. Touch the Phone Number field and use the keypad provided to enter your phone number; then touch OK. Touch the Company Name field and use the keypad provided to enter your company name; then touch OK. Scroll to and touch the Administration button on the home screen. Scroll to and touch Initial Setup. Touch Find Send Gateways. If this is successful, then the process is complete. Re-enter the E-mail Setup menu. Set default copy options Scroll to and touch the Administration button on the home screen. Touch Default Job Options. Select 2; then touch Save. Select One Left Angled; then touch Save. All copy jobs now output stapled and double-sided to the standard output bin. Set default print options Scroll to and touch the Administration button on the home screen. Scroll to and touch Default Print Options. Touch Copies Per Job. Use the pop-up keypad to enter 5 copies; then touch OK. All print jobs now output five times to the stacker bin. How to set a specific media type in a paper tray - Say for example you want to change the way the MFP handles the paper that is loaded in tray 2. This can be done by changing the paper type through the control panel using the Supplies Status button. Touch the Supplies Status button on the home screen. Touch the Tray 2 row to highlight. Touch the Modify button. Select Letterhead from the Type list; then touch OK. The Tray 2 row now reflects Letterhead as the paper type in tray 2. Change the print mode for a specific media – Some types of media perform more effectively when speeding up or slowing down the speed at which they pass across the fuser. In the following example, the fuser mode is set lower than normal when the MFP handles labels. Scroll to and touch Print Quality. Scroll to and touch Labels. Notice the print mode is set to Low 1. When specifying labels, the fuser mode is now set to Low 1. Resets – Clear fax activity log – The Resets submenu under the Administration menu allows you to perform tasks such as clearing the address book, clearing the fax activity log, restoring factory defaults, and resetting supplies. For example, to clear the fax activity log, Scroll to and touch the Administration button on the home screen. Scroll to and touch Resets. Touch Clear Fax Activity Log. Select Yes; then touch Save. Print an Event Log Scroll to and touch the Administration button on the home screen. Scroll to and touch Troubleshooting. An Event Log outputs to the standard output bin. Paper Path Test Scroll to and touch the Administration button on the home screen. Scroll to and touch Paper Path Test. Many options exist from this menu. Select a tray to pull from for the test; then touch Save. Select whether or not to send the test page through the duplex paper path; then touch Save. Select the number of test pages to send through the MFP paper path; then touch Save. Touch Print Test Page. A test page is pulled from the specified tray and outputs to the designated output bin. Scroll to and touch Finishing Paper Path Test. Select the desired paper size for the test page; then touch Save. Select the desired paper type for the test page; then touch Save. Scroll to and touch Duplex. Touch Print Test Page; then touch Print. Scroll to and touch Print Test Page; then touch Print.. Restore factory default settings Scroll to and touch the Administration button on the home screen. Touch Restore Factory Settings. Set up simulations Driver Installation Note: These install steps are similar to the install steps for Windows Vista and Windows The CD autorun feature displays the driver install Home screen. A loading screen appears. Review the License Agreement and select Accept. The Device Connection screen displays. Select Connected via the network and input the device IP address. The software creates a port, installs the driver, then installs the device software. After the installation completes, the Device Installation Complete screen displays. Right-click the icon to view device properties. Copy simulations Load an original

DOWNLOAD PDF HP 6040 MFP MANUAL

face up in the ADF. Touch the Copy button on the home screen. Touch the Start Copy button. The job outputs face down to the standard output bin. Copy a two-sided document Load a 2-sided original face up in the ADF. Touch the Copy button. Touch 2-sided original, 2-sided output. Notice the small black triangle at the edge of the Sides button. Each time an option is changed under any button, a black triangle appears on that specific button to indicate a change has been made. Enlarge or reduce a copy job Load an original face up in the ADF.

Chapter 3 : HP Color LaserJet CM/CM Multifunction Printer series (Data sheet/calendrierdelascience.com)

CM MFP CMf MFP CM MFP CMf MFP HP Color LaserJet CM and CM MFP Series Service Manual.

Chapter 4 : HP® Color LaserJet CM Multifunction Printer Toner Cartridges

Manual: Use the Manual Settings menu to configure TCP/IPv4 parameters. Default IP Specify the IP address to default to when the print server is unable to obtain an IP address from the network during a forced TCP/IP reconfiguration (for example, when manually configured to use BootP or DHCP).

Chapter 5 : HP COLOR LASERJET CM MFP BROCHURE & SPECS Pdf Download.

Read and download HP All in One Printer Color LaserJet CM MFP User's Manual online. Download free HP user manuals, owners manuals, instructions, warranties and installation guides, etc.

Chapter 6 : MFP Sims Text - Color LaserJet CM | HP® Business Site

HP Color LaserJet CM MFP series Four-line Easy Select control panel (including touch-screen graphical display) sheet face-down output bin with long paper extension Front-door access to the four easy-to-install Original HP LaserJet print cartridges with ColorSphere toner Built-in automatic two-sided.

Chapter 7 : Technical specifications | HP CM MFP User Manual | Page 4 / 4

Multi-functional printer HP Color LaserJet CM MFP - Service manuals and Schematics, Disassembly / Assembly. Download Free. Multi-functional printer HP Color LaserJet CM MFP - Service manual.

Chapter 8 : HP (Hewlett-Packard) Color LaserJet CM MFP user manual - calendrierdelascience.com - Solv

HP Color LaserJet CM and CM MFP Series Maintenance How do I Steps to perform Load Trays 2, 3, 4, or 5 The product automatically detects these standard paper.

Chapter 9 : HP COLOR LASERJET CM/CM - MULTIFUNCTION PRINTER SERVICE MANUAL Pdf Downl

The printer name is HP MFP Send Fax when the driver is installed on a local printer. If you select A network printer, or a printer attached to another computer, then the IP address.