

Chapter 1 : xm xpressez manual

View and Download Audiovox XMCK10AP user manual online. Audiovox Satellite Radio Receiver User Guide. XMCK10AP Receiver pdf manual download. Also for: Xmck10a, Xm xpress ,

The Main Menu list will appear on the screen see Figure 6. The Xpress XM7 unit has an internal wireless FM transmitter, which allows you to play the audio through any standard FM receiver, eliminating the need for hardwire connections. To prevent distortion caused by overdriving the audio playback device input, it is recommended that you adjust the audio level signal to mid-range. Upon entering this mode, a channel list is displayed with the current channel in play highlighted see Figure Tune Select Figure The Xpress XM7 unit can hold up to 20 entries, after which any new information saved will replace the oldest entry in memory.

Stock Ticker Stock Ticker This feature allows the user to monitor various stocks. The Xpress XM7 unit can monitor up to 20 stock symbols. The stock will be immediately removed. To exit this function, press the Menu button to revert to previously active screen Figure 5.

Display Screen Mode Display Screen Mode This feature allows the user to personalize the display of the unit to individual preferences. Upon entering Display Screen mode see Figure 27 , the user can adjust the way information is viewed.

Scrolling Display Scrolling Display The Scrolling Display feature allows the user to program the Xpress XM7 unit to scroll stock tickers or Info Extra information across the bottom portion of the screen continuous stream of information. The paging mode feature presents the data one page at a time and is useful when viewing the display at a distance.

Set Clock Set Clock This feature allows the user to personalize the clock display. The clock data is provided via the XM7 signal, and is displayed according to the users settings. By default, when the power to the unit is reapplied the user must press the Power button to turn the unit back ON. This feature allows the user to program the Xpress XM7 unit to automatically turn ON when the power to the unit is reapplied much like a car radio.

Set Factory Defaults Figure Search Button The Search button provides the ability to search by category or to scan directly through each of the available channels or Memory Memory This feature allows the user to program into memory favorite song titles, artist names and channel information. To make an entry, press the memory mem. Up to 20 entries can be stored. The following screen will appear, the curved lines on either side of the XM7 logo gradually disappear and the unit will shut down. Each button on the remote control functions in the same way as the button on the Xpress XM7 unit.

Page 36 Search Button search " Depressing the Search button will cause the unit to initiate a search based on the search mode stored in the unit.

Channel Up Button " This button is used to scroll through upper channels in the channel list as well as navigate to the next higher line in a list of menu options. It is strongly recommended that the unit be installed and kept away from heat sources or direct sunlight. When cleaning, use only a soft, dry cloth. Never use any chemicals, abrasives, solvents, alcohol based cleaning solutions or ammonia. Use only the Audiovox approved adapter specified in the kit for the Xpress XM 7 Satellite Radio Receiver, or the unit could be severely damaged. This manual also for:

Audiovox XMCKA - XM Radio Tuner Pdf User Manuals. View online or download Audiovox XMCKA - XM Radio Tuner User Manual.

These kits are available at retailers where Audiovox main units are sold. Required subscription for service sold separately. Installation costs and other fees and taxes may apply, including a one-time activation fee. All fees and programming subject to change. College sports games subject to availability. Only available in the 48 contiguous United States. All other trademarks are the property of their respective owners. Operation is subject to the following two conditions: Xpress Receiver Unit Display Screen Brightness and Contrast Screen Tune Select Erase All Screen Tune Select Erase Some Screen Select by Artist Confirmation Screen Erase All Stock Screen Erase Some Stock Screen Time Zone Set Screen Daylight Savings Selection Screen Setting Factory Defaults Screen Direct Channel Entry Screen Xpress Receiver Remote Control The Xpress XM7 unit recognizes and decodes the incoming XM program information and provides an audio signal to your radio or other audio output equipment. When installed in a vehicle, the XM signal can be received and processed virtually anywhere as long as there are no obvious satellite signal obstructions such as nearby tall buildings, high terrain, parking garages or tunnels. For home use, situate the Xpress XM7 unit close to your stereo receiving equipment. Audiovox FM Direct Adaptor: You have one of two choices to activate your service: Online or by Phone. If you can hear XM7 Preview, your equipment is ready. The antenna must be installed on the outside of your vehicle for best performance. The 8-character alphanumeric XM7 ID will appear on the screen. Write the alphanumeric ID below Figure 1 for future reference. No adjustments are allowed in this mode. To exit the Radio ID screen, tune to any channel by turning the rotary knob and press. Please check your 8-character alphanumeric XM7 ID code carefully. You may wish to double-check your ID code on the outside of your tuner box. Enter the ID code below: After the activation form is submitted you should keep your receiver ON for at least 1 hour. This will complete the activation process. When the Xpress XM7 unit is activated, you will be able to access over digital radio channels. Search Button - This button allows the user to search the next channel category as well as between preset channels or perform a continuous search. The continuous search will scan all available channels in all categories or all channels within a Preset group stopping at each one for four 4 seconds until the user presses the search button again to make a selection. This knob has a dual purpose. In the default mode, this knob provides sequential tuning through the available program channels. When the knob is turned in a clockwise CW direction the unit tunes up one channel at a time. When the knob is turned in a counter clockwise CCW direction the unit tunes down one channel at a time. The current selection from the list will be highlighted on the display. When in any of the three preset banks, momentarily pressing any of the number buttons will recall the stored channel. Keypad Buttons - These buttons are used to directly enter a desired channel number. They are also used when entering and recalling preset channel numbers into memory. When the letter size changes, the field will scroll. This feature is useful when viewing the display at a distance. If this is the first time using the Xpress XM7 unit, the screen will alternately display the preview channel screen and a number of messages, including: Refer to Antenna Aiming during the installation procedure. Press the Power button to turn the unit ON. When the unit turns ON the XM7 logo will appear for 3-seconds curved lines on either side of the XM7 logo gradually appear see Figure 4 followed by the Audiovox logo. These screens will be followed by the active channel see Figure 5 , which defaults to the last tuned channel setting prior to power being turned OFF. The Main Menu list will appear on the screen see Figure 6. While in the menu screen function, if a button is not pressed within seconds from the previously selected function, the unit exits the menu screen function and reverts to the default screen display. Upon setting and confirmation of a Menu selection, pressing the Menu button will exit the Xpress XM7 unit to the active screen See Figure 5. The following options are available: The Xpress XM7 unit has an internal wireless FM transmitter, which allows you to play the audio through any standard FM receiver, eliminating the need for hardwire connections. If not, the strong signal from the FM station may overpower the Xpress XM7 unit FM transmitted signal which may result in interference. If there is no activity for 12 seconds, the

unit will exit to active channel screen. Once the desired setting is obtained, press the menu button twice to return to the active channel screen. When the Receiver is to be used in battery-operated accessories, such as the Xpress Boom Box XMB10, to maximize battery life, it is suggested that the brightness setting be reduced to a minimal level. Brightness and Contrast Screen Audio Level This feature allows the user to set the audio output signal level see Figure To prevent distortion caused by overdriving the audio playback device input, it is recommended that you adjust the audio level signal to mid-range. The horizontal bar graphs represent the repeater signal and satellite transmission signal strength. Position the antenna to optimize either the satellite or terrestrial signal. When the optimal setting is achieved, press the Menu button on the unit or the Menu on the Remote Control to exit this screen and to return to the main menu. When the Antenna Aiming screen is selected, this screen does not time-out like the other menu screens. This screen will stay active until the Menu Button is pressed again. Audio Level Screen Strong Figure This feature allows the user to change the way the search button on the Xpress XM7 unit functions. The Search button can be set to search categories, to scan through all presets A, B, C or all available channels. Direct Tuning Screen Figure Upon entering this mode, a channel list is displayed with the current channel in play highlighted see Figure To exit to the active channel screen press the menu button twice. Press and release the memory mem button to save the information of the current broadcast song or program. The Xpress XM7 unit can hold up to 20 entries, after which any new information that is saved will replace the oldest entry in memory. To recall saved information, press and hold the memory mem button for 3-seconds. The Xpress XM7 unit will provide a continuous view of the Channels, Songs and artists held in memory. To exit to the activate channel screen press the menu button twice, press the jump button twice or wait 12 sec. The Xpress XM7 unit can hold up to 20 entries, after which any new information saved will replace the oldest entry in memory. When the exact Artist or Song is detected on the XM7 broadcast, the user will be notified via a confirmation tone. An alert will also appear on the screen for approximately 8sec identifying that a match was found. Press menu to delete marked items and exit the mode. This feature enables the Xpress XM7 unit to search incoming XM7 broadcast stored content by artist title. Select by Song Confirmation Screen Figure The Xpress XM7 unit can monitor up to 20 stock symbols. The Xpress XM7 unit will sometimes complete the entry. Stock Ticker Screen Figure Erase Stock Screen Figure The stock will be immediately removed. To exit this function, press the Menu button to revert to previously active screen Figure 5. This feature allows the user to display the available Info Extras, primarily sports information. Erase Some Stock Screen Display Screen Mode This feature allows the user to personalize the display of the unit to individual preferences. Upon entering Display Screen mode see Figure 27, the user can adjust the way information is viewed. Display Screen Figure Info Extra Screen Scrolling Display Background Mode The Scrolling Display feature allows the user to program the Xpress XM7 unit to scroll stock tickers or Info Extra information across the bottom portion of the screen continuous stream of information.

Chapter 3 : Audiovox Portable Satellite Radios for sale | eBay

Audiovox XMCKA - XM Radio Tuner Manuals & User Guides User Manuals, Guides and Specifications for your Audiovox XMCKA - XM Radio Tuner Receiver. Database contains 1 Audiovox XMCKA - XM Radio Tuner Manuals (available for free online viewing or downloading in PDF): Operation & user's manual.

Chapter 4 : AUDIOVOX XMCK10AP USER MANUAL Pdf Download.

The Audiovox XMCKA XM Xpress Satellite Radio Car Kit provides you with everything you need to bring the power of XM satellite radio to your car. This kit includes the powerful Xpress XM7 satellite radio receiver with its large, easy-to-read 5-line display screen, and a handy IR remote control that lets you run the XM7 without having to take.

Chapter 5 : XM Xpress Portable Satellite Radio | eBay

XMCKA comes with the Xpress Car Kit. This includes mounting accessories, 12volt vehicle power adapter, car cradle,

DOWNLOAD PDF XM XPRESS XMCK-10A USER GUIDE

mini-micro car antenna, and a cassette adapter. Also included is a full-functional remote control and the Audiovox Xpress Receiver.

Chapter 6 : Audiovox XMCKA - XM Radio Tuner Manuals and User Guides, Receiver Manuals &” calend

user guide XMCKP. QuickStart 1. to your Xpress R. Please be aware that XM claims no responsibility for damage from data loss due to breakdown, repair, or.

Chapter 7 : XM Satellite Radio XMCK-5P user manual - calendrierdelascience.com - Solve your problem

Audiovox Xmck20 Manual Information, Manual and Support for the Audiovox Xpress XMCKA, audiovox xpress, audiovox , xpress car kit, xm radio model xmck20, xmc10 Audiovox XMCK20 Xpress-

Chapter 8 : Audiovox XMCKA - XM Radio Tuner User manual

The following brands have car stereo receivers that are Sirius-Ready DC and can directly connect to the SiriusConnect tuner without an additional interface. 18 XM Direct 2 Solutions XM Direct 2 Kit CNPUCA Add SiriusXM to an XM-Ready® and SAT Radio-Ready car stereo receiver with a tuner that installs discreetly behind the dash.

Chapter 9 : XM Radio Accessories | eBay

The Audiovox Xpress is one of the smallest and lightest XM Satellite Radio available. The Xpress and XM Satellite Radio service are all you need to access digital-quality continuous programming across the United States.